

**Removal**

---

- 1 Remove glove box (68—140).
- 2 Unscrew electronic switching unit for temperature control (9) from holder and pull off electric coupling.
- 3 For installation proceed vice versa.
- 4 Check automatic climate control for function.

